


Diamond Desk Installation Instructions

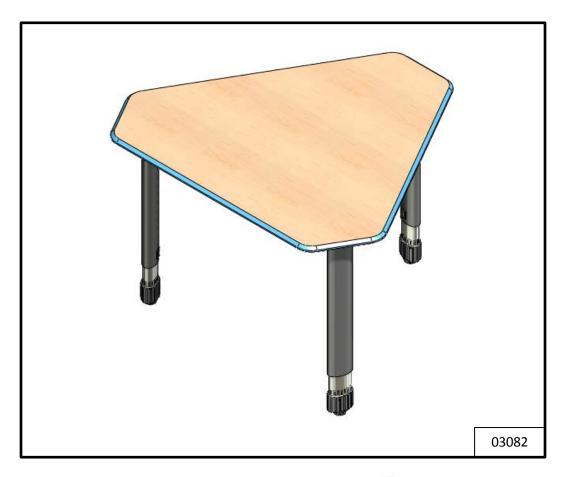






For Assistance in assembling product, missing or damaged parts, or to place an order, please contact customer service at 800-328-1061.


You may also place your order online at

Components and Hardware



Connector Bolt ¼-20 X 23mm P/N: 70867

QTY: 2



Connector Nut ¼-20 x 17mm P/N: 70869

QTY: 2




#10 x 5/8" Wood Screw P/N: 70080


QTY: 14



Hex Key Allen Wrench 3/16" P/N: 77813 QTY: 1

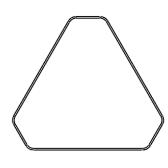

Diamond Top QTY: 1

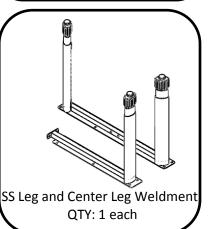


Replacement Hardware Pack:


- 1. 69761 BLA/ZINC-R
 - a. (2) 70867 Connector Bolt 1/4-20x23mm
 - b. (2) 70869 Connector Nut 1/4-20x17mm
 - c. (14) 70080 #10x5/8 Truss Head Phillips Head
 - d. (1) 77813 Hex Key Allen Wrench 3/16"

Assembly Instructions

Step 1: Align the center support with the pre-drills on the top.

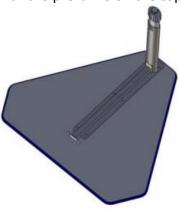


Step 2: Position the other legs as shown below, aligning them with the pre-drills.

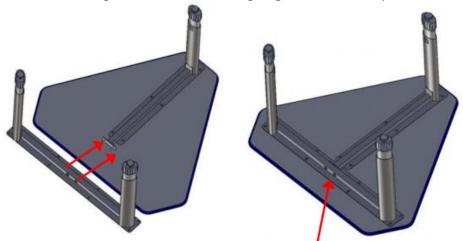

Step 3: Secure the legs together **loosely** with the connector bolts provided.

Step 4: Fasten the frame assembly to the top using the (14) 5/8" wood screws provided.

Step 5: Tighten the connector bolt using the Allen Key (Hex Key) provided.

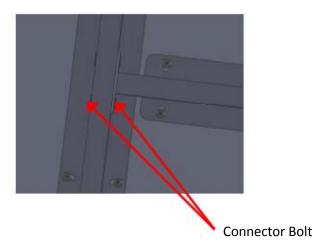

For Assistance in assembling product, missing or damaged parts, or to place an order, please contact customer service at 800-328-1061.

You may also place your order online at